

Model: VM Series Vending Machines
Subject: Refrigeration Condenser Cleaning
Date: June 2010

Cleaning Procedure

The condenser is accessible from inside the vendor by removing the cover in front of the refrigeration unit. The condenser must be cleaned on a regular basis (at least every few months) to ensure the condenser doesn't block with dust. This ensures there is sufficient airflow through the condenser to allow the refrigeration to work efficiently. Failure to do this will reduce the refrigeration unit life and void the warranty on the refrigeration unit.



Remove the 4 top screws

Loosen the 4 bottom screws half a turn

Take off the cover and clean the condenser coil behind the cover with a brush and/or vacuum cleaner.

Check and clean as necessary the bottom vents in the cabinet.

Replace the cover, refit and tighten the screws.

